

### NOTICE OF ASSEMBLE

#### Tips for assembling

- 1. Because this product contains small parts, children need to use this product with an adult to avoid accidental ingestion and cause suffocation hazard. There are sharp objects in the product, be careful not to pierce people to avoid injury.
- 2. After all the materials are used in the required amount in the operation steps, put the remaining materials back into the original bag until the installation is completed. (Avoid losing materials during the installation process)
- 3. The unit of dimension marked in the step diagram is "cm".
- 4.Tips for making template paper: Put the template on the back of the material, fix it with some small double-sided tape, and then cut out the material to prevent the cloth or template from moving in the cutting process, or causing errors in the cut material. Or lead to insufficient materials.
- 5.According to the "Parts Rule Example" at the bottom of this page, refer to the parts on the part number drawing, find the actual product and compare it with the bill of materials, and then install it after confirming that it is correct. (Wooden parts only)
- 6.It is not advisable to apply too much alue, so as not to wait for a longer time to dry, and overflow will affect the effect of the finished product.
- 7. There are unavoidable small deviations in the color of wood, fabric, and beads of different batches, without notice, thanks for understanding.



Find the corresponding block number. use a knife in the connection point gently press, you can take out the wood

Use a knife to smooth out the burr.

Or use sandpaper to smooth out the burr

#### Testing on LED function

Be sure to test the LED lights before making the lighting, note that the LED white wire to the negative, gray wire to the positive reference to the following figure operation test.



#### How to assemble the battery holder



1. Material and tools needed: - Battery holder, LED bulb. tape, screw driver and 2 pieces battery holder. AAA size battery(not provided)

2. Use screw driver and 3. Insert the battery take take the lid off from the notes on the polarity.

4. Connect the red wire to grey wire. Connect the black wire to white



5. Wrap the exposed wire with the tapes.



6. Place the box lid and fastness with screw driver.

#### Examples of parts rule:

A01: The parts are directly in the box: B01: The parts are in the B bag; C01: The parts are in the C bag, and so on (Note: The printing paper is displayed in the step A07-01: The printing paper is placed directly in the box, The part number is A07-01. In the step, the template paper A07-C01 is displayed, A07 is the template paper, D01 is the cutting template used for the corresponding material, D01-01, D01-02 are the part numbers for the parts, and the printing paper and template paper are directly placed in the packaging box.)

### Table of Contents

1 . 45.00		
Name	Materials Bags	
printing paper &template paper	A bag A11,A12 (all of printing paper and templete are in A11,A12,total 4 pieces of A5 paper)	
spinning plane	A bag+B bag+E bag+F bag+printing paper	— page 3-4
base of spinning plane	A bag+ F bag+G bag+printing paper	— page 4-5
ferris wheel	C bag+E bag+F bag	— page 5-6
base of ferris wheel	C bag+F bag+G bag+printing paper	page 6-7
gate&guide board	D bag+printing paper	page 7
bench	D bag	—page 7
beach umbrella	D bag+printing paper	page 7
hobbyhorse	D bag+F bag+printing paper	page 8
street lamp	D bag+E bag	page 8
windmills	D bag+E bag+printing paper	page 8
ice cream van	A bag+D bag+E bag+printing paper	— page 9-10
steps and fliowers	D bag	page 11
balloon	E bag+F bag	page 11
coloured flags	E bag+F bag+printing paper	page 11
outer frame	A bag+B bag+E bag+F bag+G bag+printing paper +templete paper	_page 11-15
batteries box		page 15

#### Symbol description used



#### About the use of glue

Method for using glue:


1. After applying the glue, let it dry for a few seconds before pasting.


2. Fix it slightly with your hands, and finally put it aside to dry;

#### Tips:

When pasting the plane printing paper, a piece of waste bank card or telephone card can be used to wipe evenly after the glue is smeared on the wood board, and then the printing paper is pasted to squeeze out the air inside.

#### Material List Thumbnail (For Reference Only)

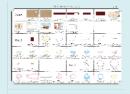

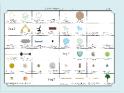




#### Printed paper and template paper thumbnail (For Reference Only)





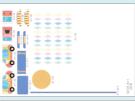





#### Types of glue:


White latex: Used for adhering soft materials, such as wood and paper.
Alcoholic Glue: Used for adhering hard materials such as cloth, plastic, beads, wire, dust cover, etc.







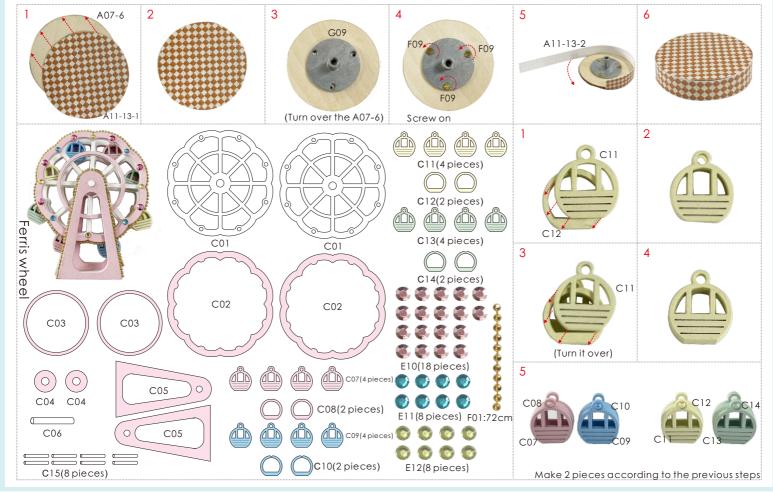


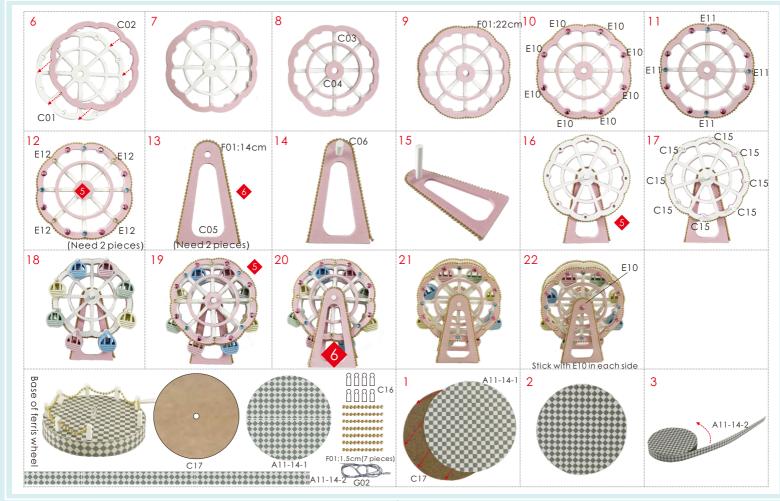


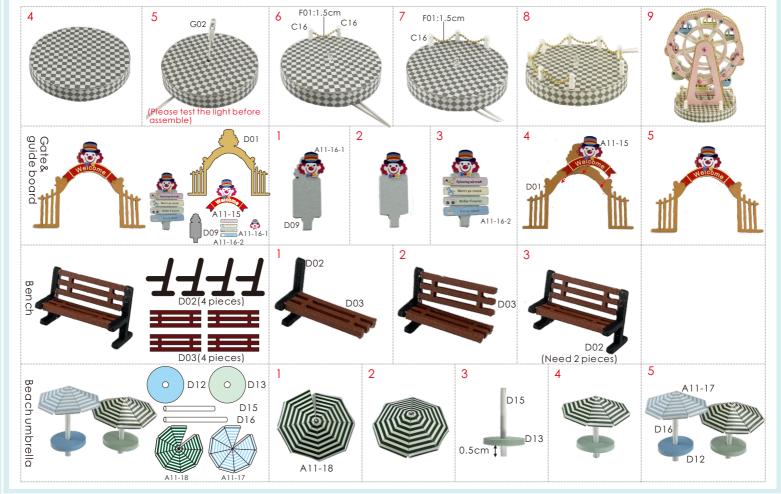


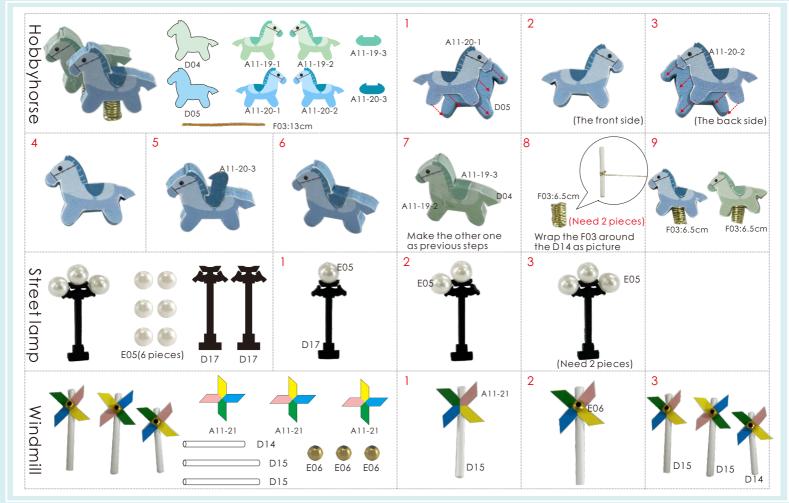


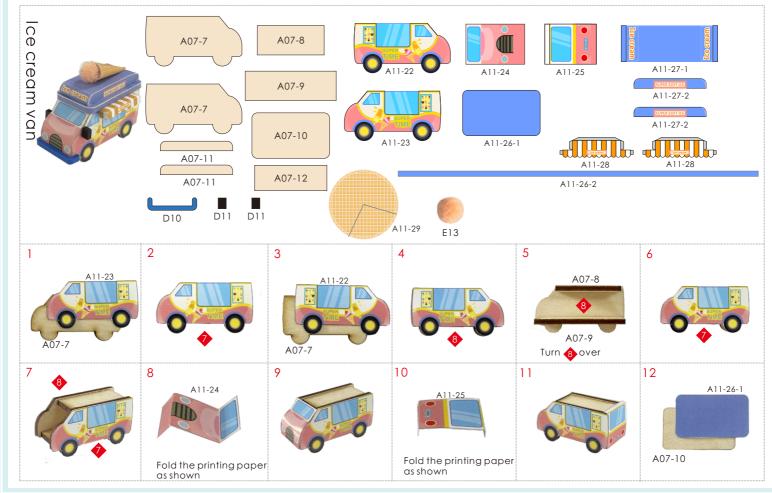

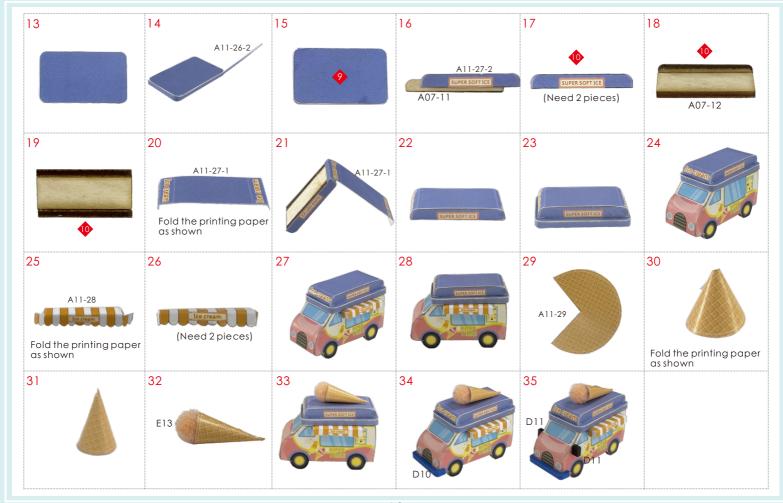


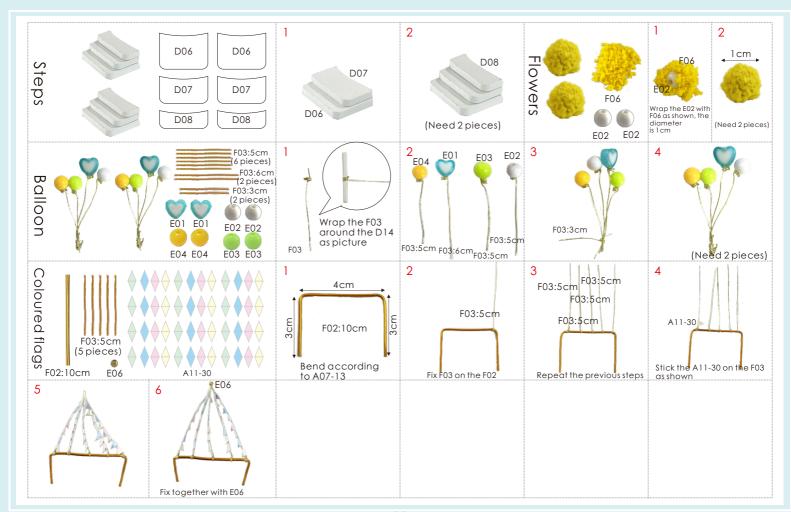

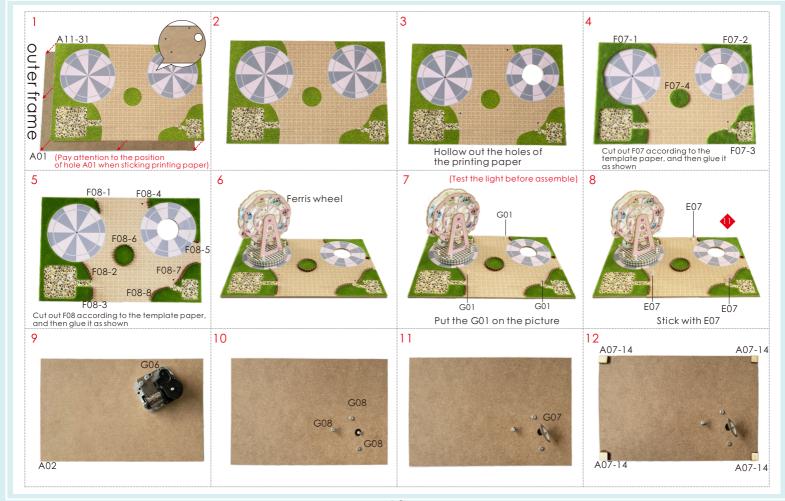

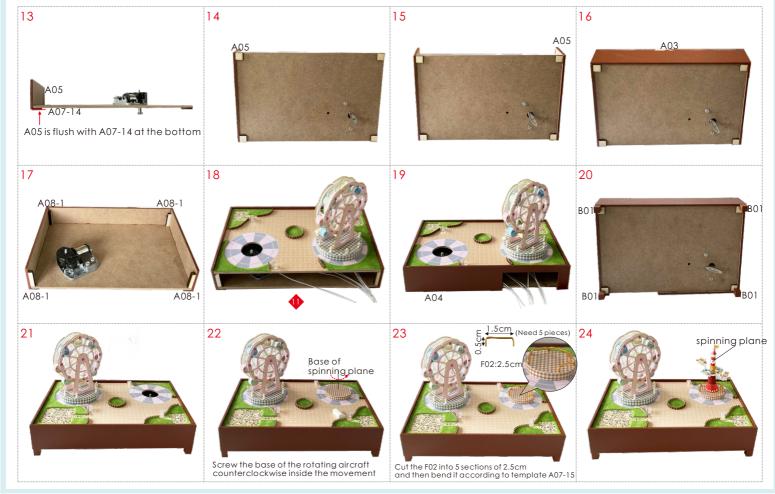



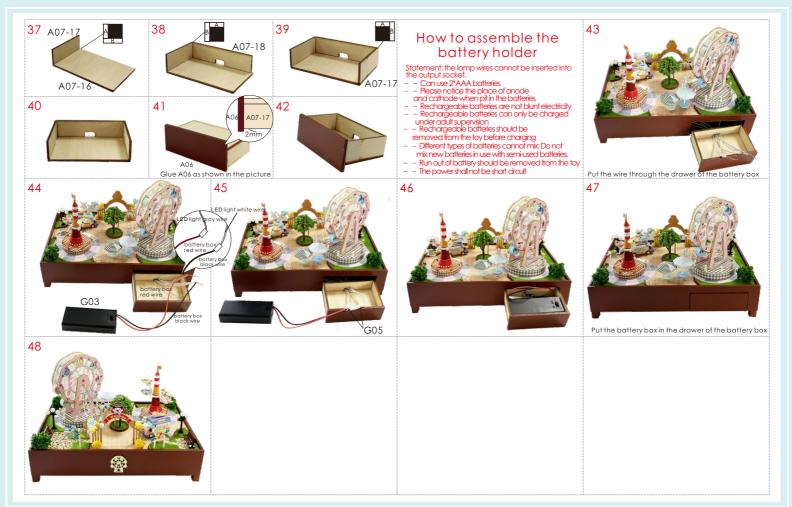

### Installation of dust cover

## dust cover (Upgrade version accessories need to be purchased separately)





Z03 Z02 Z02

Z02 Z02 ZO1 stick five pieces of plexiglass dust cover as shown

Ripped one side of kraft paper, leaving one side of kraft paper

3

8



Take out the plexialass and tear off the kraft paper with text on each piece of plexialass

Ratio:1:10 20\*13\*0.18(1piece)

14.5\*12.64\*0.18(2pieces)


Z01 plexiglass (transparent) Z02 plexiglass (transparent) Z03 plexiglass (transparent) 20\*14.5\*0.18(2pieces)

6


stick 702 and 703 on 701.



The kraft paper that has been ripped off faces inwards, and the kraft paper that has not been ripped out faces out wards.

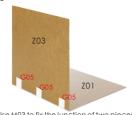

Use M03 to fix the junction of two pieces of plexiglass, (use transparent tape to replace M03)

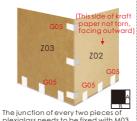


plexiglass needs to be fixed with M03 (to prevent the plexiglass falling off)




stick appropriate amount of alue to the interface of the two pieces of glass and scrape it slightly to make the glue penetrate into the junction of the two pieces of glass (the red line is the plexiglass interface)




needs to be fixed with M03(to prevent the plexialass falling off)

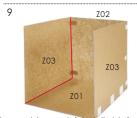

stick appropriate amount of glue to the interface of the two pieces of glass and scrape it slightly to make the glue penetrate into the junction of the two pieces of glass (the red line is the plexiglass interface)

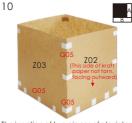


The junction of two pieces of plexiglass needs to be fixed with M03 (to prevent the plexialass falling off)

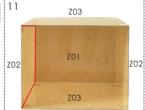

stick appropriate amount of alue to the interface of the two pieces of glass and scrape it slightly to make the glue penetrate into the junction of the two pieces of glass (the red line is the plexialass interface)



the dust cover need to be alued 8 interfaces

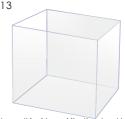

Leave it for 1 hour. After the alue dries out. tear off a layer of kraft paper outside the plexiglass

# Sence Display





# Details Display














## Combination display



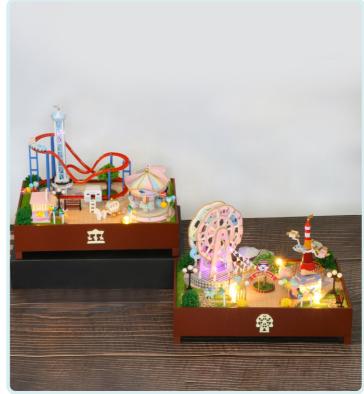

The instruction manual should be keep, after assembled