

M034

Karuizawa's Forest Holiday

AUTUMN IS QUIET,
IN THIS SEASON YOU CAN CALM DOWN TO
TASTE THE LIFE OF EACH SECTION.





M034 Instruction Manual

NOTICE OF ASSEMBLE


Making tips

1. LED wiring indication: White=Positive; Grey=Negative.
2. Use a craft blade to carefully skim over the plastic to bare the copper wire.
3. For LED wiring extension, please refer to the below steps:


LED wire

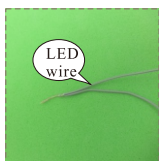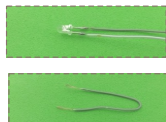

Twist the copper of both LED wire and extension wire together.

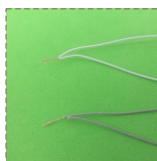


Do the same on the white wire.
Remarks: Tie a knot at the end of the grey wire to differentiate the polarity.

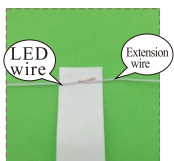

Place the duly twisted wire on the tapes provided.



Roll and wrap the wire.

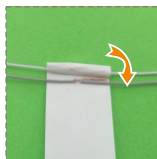

Place another wire next to it.
Remarks: DO NOT contact both copper wire to avoid short circuit.





Roll and wrap it together.

Warnings

- The product is not suitable for children under 14 years old. The should be under custody of adults when playing with the product.
- There are small parts, please do not swallow them for avoiding dangerous accidents.

Tips for assembling

1. Pictures shown on the package may be slightly different from the actual product.
2. Please use the provided tracing paper for cutting purpose to achieve the best outcome.
3. Product designs and specification may be subject to change without advance notice for purpose of making improvement.
4. Testing on LED function:

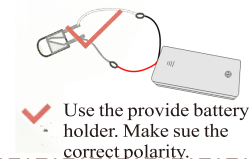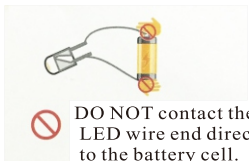

How to assemble the battery holder




1. Material and tools needed:
- Battery holder, LED bulb, tape.




2. Twist the following wire together.
(I) WHITE wire from the battery box with the GREY wire from LED bulb.
(II) GREY wire from the battery box with the WHITE wire from LED bulb.



3. Wrap the exposed wire with the tapes.

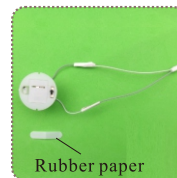

4. Tear off the rubber paper

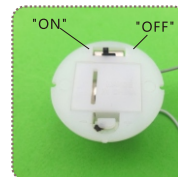


5. Set the black key on the battery box to one side of "ON" as shown.







6. Turn on the power and complete the installation.


Product information

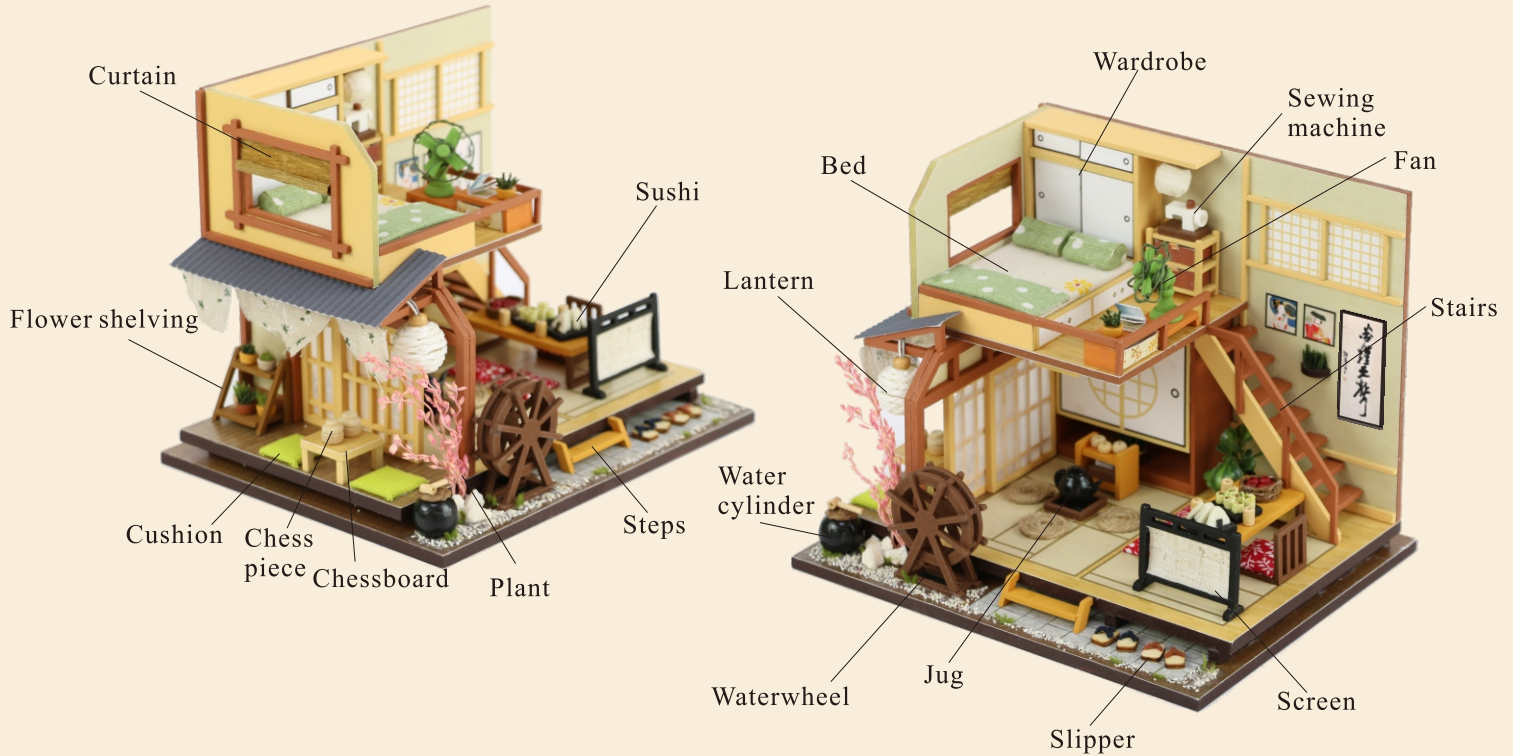

Outer frame

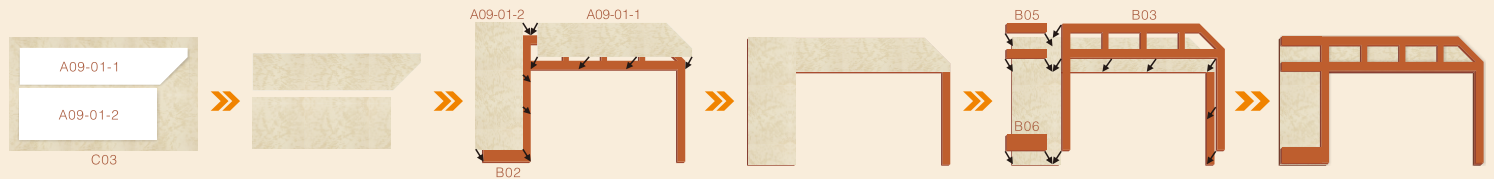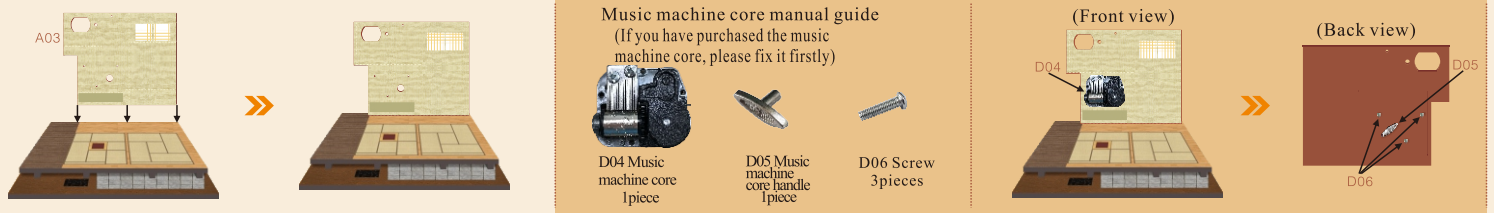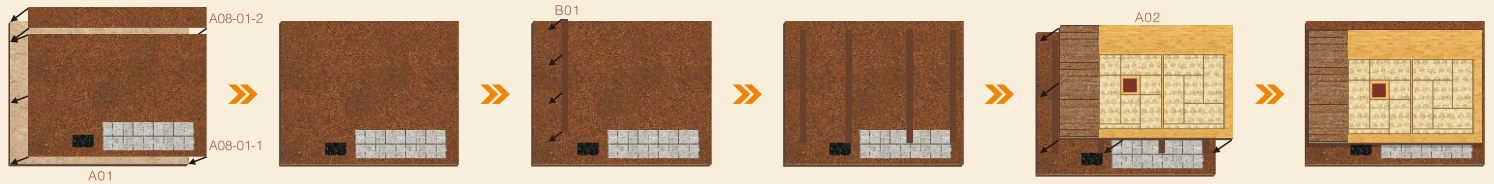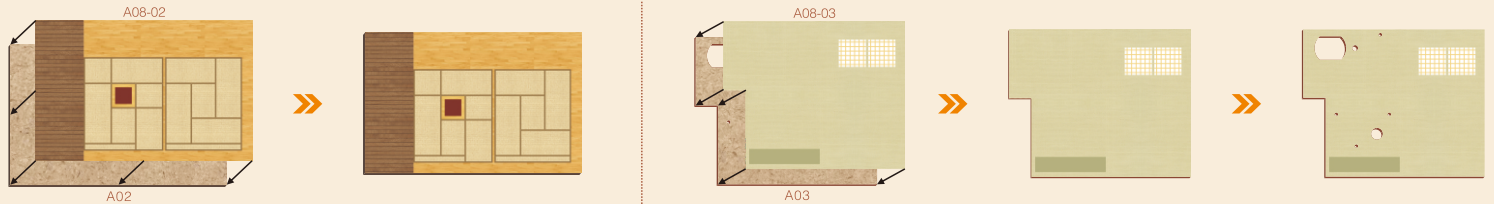




Ceiling cabinet

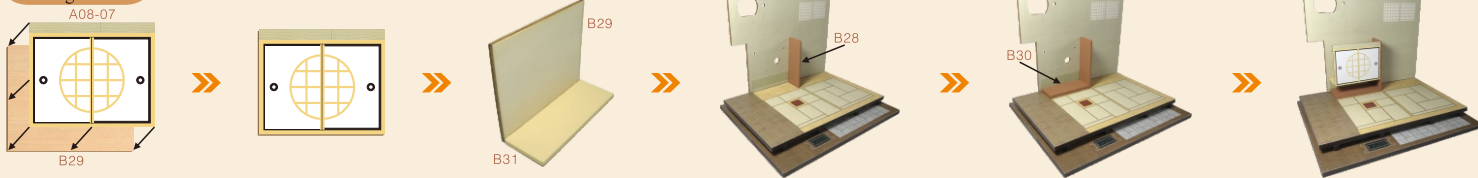


Stairs




Ceiling lamp

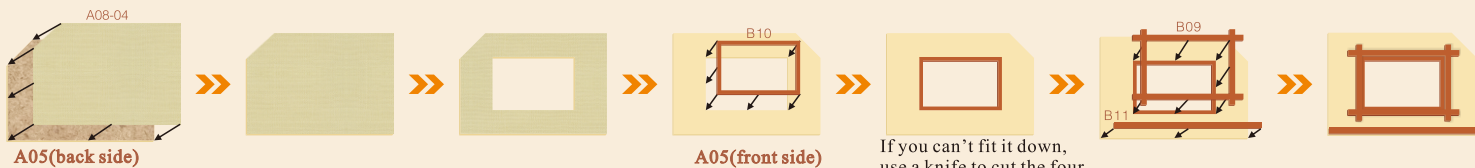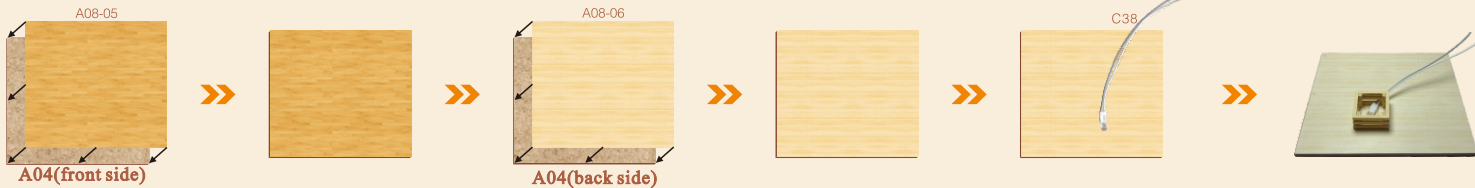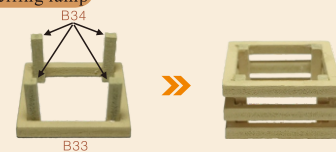

If you can't fit it down,
use a knife to cut the four
corners of A05.

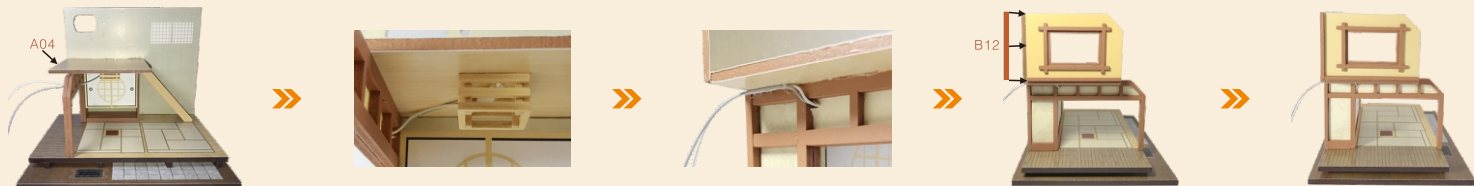


Eaves

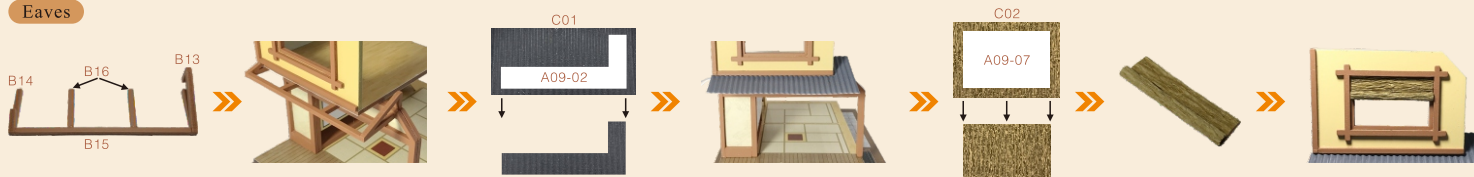


Lantern



Door

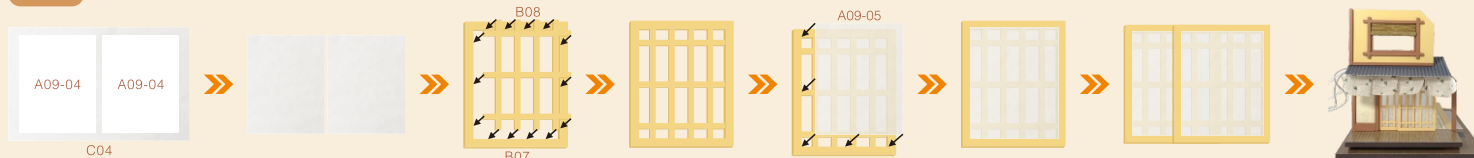


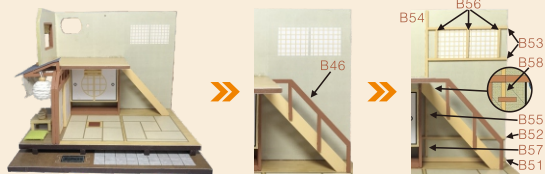

Floor heater




Table

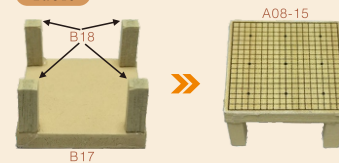

Flower shelving



Potted plant

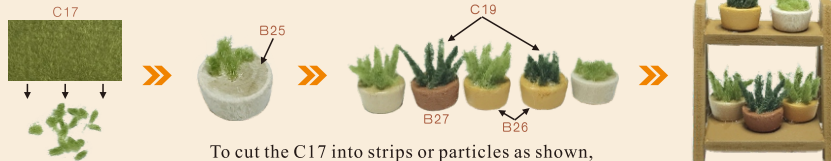


To cut the C17 into strips or particles as shown, attach them on B25.


Cushion




Tea shelving

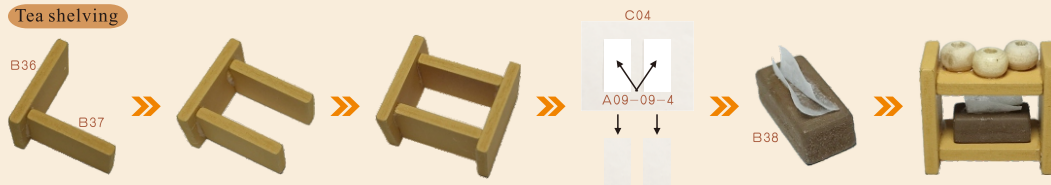

Door

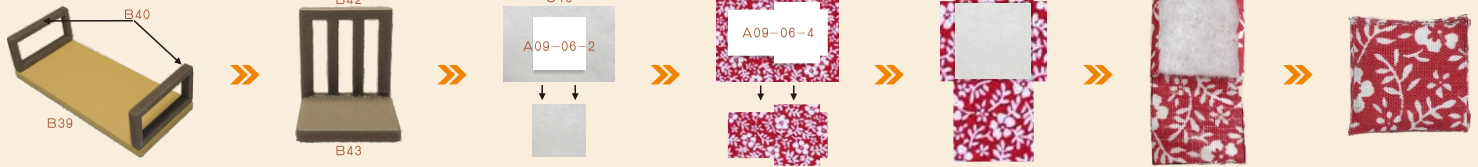


Egg rolls

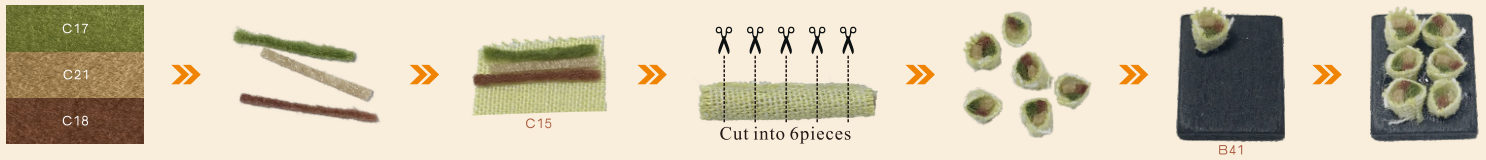


Rice roll



Apple basket

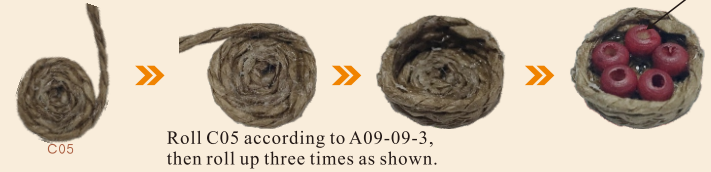

Screen

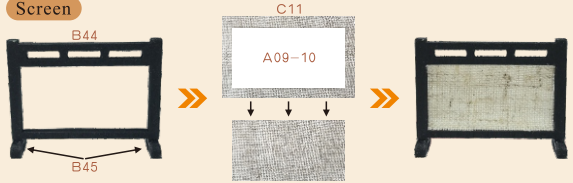

Plant




The cushion material: A09-06-1, A06-06-3, B19, C10, C16
 The making mother reference page 6.


Bed




Wardrobe

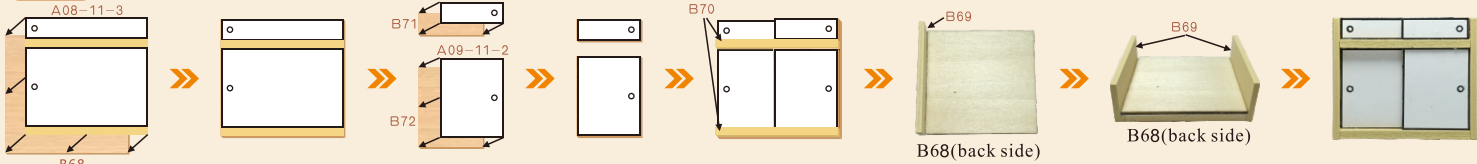

Bed cushion

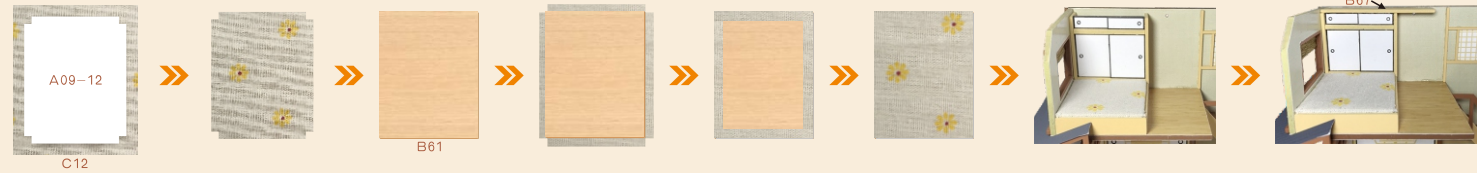

Ceiling lamp

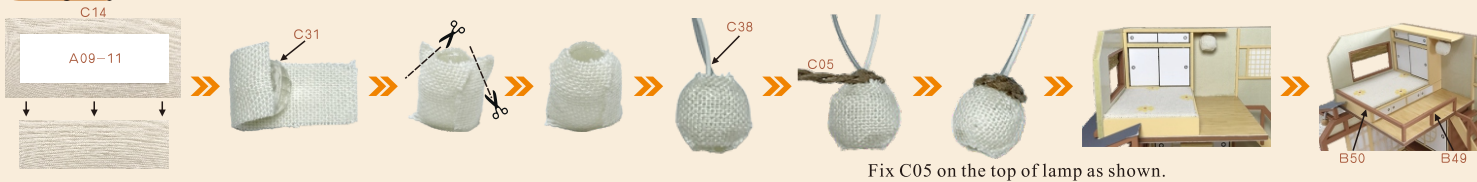

Fix C05 on the top of lamp as shown.


Bedclothes



Shelving



Sewing machine

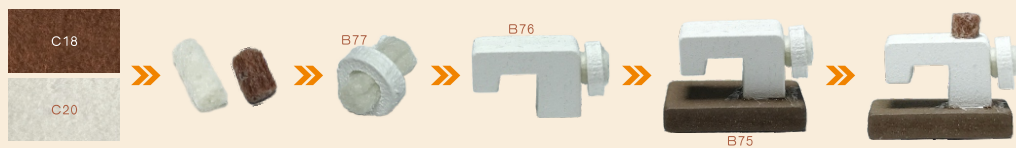

Floor cabinet



Fan



Bend C36 according the A09-16 as shown.

Photos



A08-12

Plant



The making method reference page 6.

Water cylinder



Waterwheel




Steps



Slippers



Outdoors

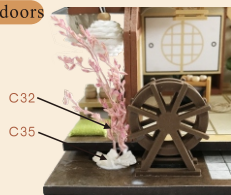

Apply the glue as shown.

C34

The glue C17




How to assemble the battery holder

Statement: the lamp wires cannot be inserted into the output socket.

- Please notice the place of anode and cathode when pit in the batteries
- Rechargeable batteries are not blunt electricity
- Rechargeable batteries can only be charged under adult supervision
- Rechargeable batteries should be removed from the toy before charging
- Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.
- Run out of battery should be removed from the toy
- The power shall not be short circuit



Pass all the wires through the hole and then come out

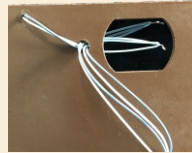

Trim all the LED wiring to the same length. Use a craft blade to carefully skim over the plastic to bare the copper wire. Twist the same colour wire together.



Twist the following wire together:
(I) WHITE wire from the battery box with the GREY wire from LED bulb.
(II) GREY wire from the battery box with the WHITE wire from LED bulb.



Rubber paper

Roll and seal the duly twist copper with the white tape provided. Place the battery box in the allocated space.




Tear off the rubber paper

Installation of dust proof cover


(For updated version, the parts need to be purchased separately)



D01 Transparent cover
0.18*13.6*17.5 (2pieces)

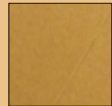


D02 Transparent cover
0.18*13.64*13.6 (2pieces)

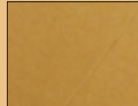

D03 Transparent cover
0.18*14*17.5 (1piece)



1. Tear off kraft paper of each piece of transparent cover.

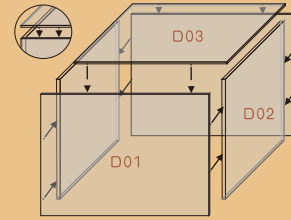

2. Paste D01, D02 and D03 together to complete the dust proof cover as shown.

Photo of Dust proof cover



Attention: Please keep the instruction manual for future enquires after installation.